



MANUAL

VR- WIRE ARCH ATTACHMENT[®]


1

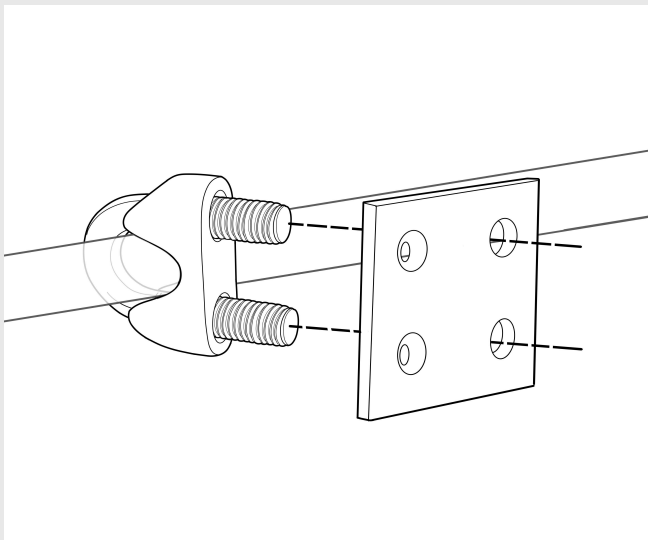

2

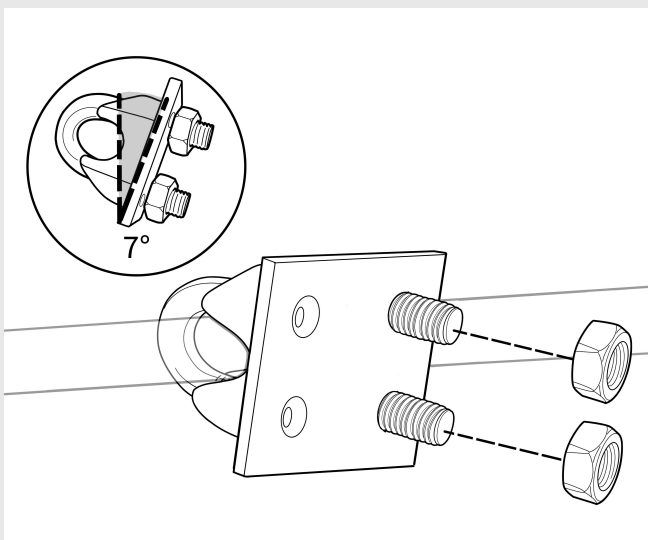

3

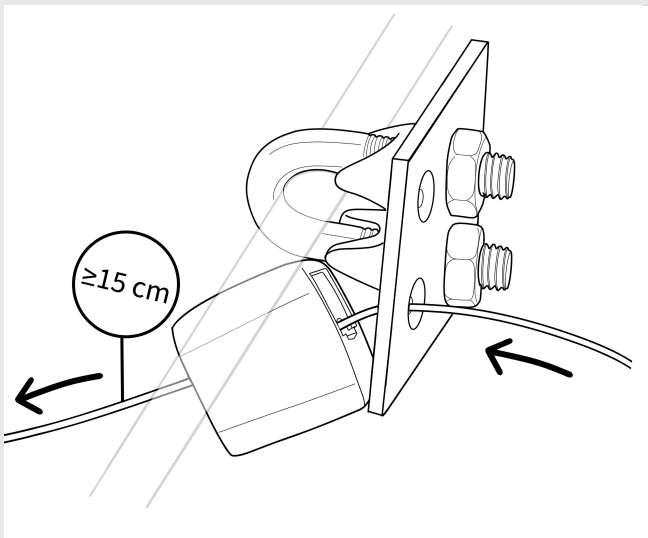

VR-SET



VR- Plaat[®]



THE WIRE ARCH ATTACHMENT OF CROP WIRES INNOVATED BY VAN ROOY & CO HAS BEEN APPROVED BY T.N.O. AFTER EXTENSIVE RESEARCH AND CONSULTATION WITH GREENHOUSE BUILDERS, VAN ROOY & CO HAS DEVELOPED A SIMPLE YET RELIABLE ATTACHMENT.

STEP BY STEP

STEP 1:

Place the VR plate on the crop side of the wire arch.

STEP 2:

Attach the VR plate tilted ($\pm 7^\circ$) using a cable clamp M16 with the top toward the crop with nut and bolt to the threaded arch.

STEP 3:

Insert the wire at the bottom through the plate, slide the Gripple GP2 onto it (flat side visible) and leave ± 15 cm overlength on the window side.

